



Conway Flooring and Decking is proud to introduce the new Aurora LVT (Luxury vinyl tile) dry back / glue down the vinyl floor.

This premium LVT is Assure certified and tested to the highest European standards, ensuring quality and durability.

A .33mm wear layer provides exceptional scratch and wear resistance, protecting your floors from daily wear and tear.

Made from 100% virgin material, Aurora LVT is an eco-friendly option to enhance any room's appearance.

Experience the luxury and durability of Aurora LVT for yourself today.

COLOUR RANGE



TITAN - 1 STRIP
ANTIQUE WOOD TEXTURE
- BEVELLED EDGE



POLARIS - 1 STRIP ANTIQUE WOOD TEXTURE - BEVELLED EDGE



MIRA - 1 STRIP ANTIQUE WOOD TEXTURE - BEVELLED EDGE



ELECTRA - 1 STRIP ANTIQUE WOOD TEXTURE - BEVELLED EDGE



CALISTOS - 1 STRIP ANTIQUE WOOD TEXTURE - BEVELLED EDGE



ARIEL - 1 STRIP ANTIQUE WOOD TEXTURE - BEVELLED EDGE



PRODUCT INFORMATION AND WARRANTY

Thickness 2mm Wear layer .33mm

Plank dimensions 1227 x 235 x 2mm

Packaging Unit 18 pieces per box / 5.19m


Texture option/Surface finish Antique wood finish and 4-sided micro bevel

Installation method Glue down installation

Warranty 20 years of Heavy Domestic and 5 years of Light Commercial use

Application Heavy domestic and light commercial

Waterproof 100%

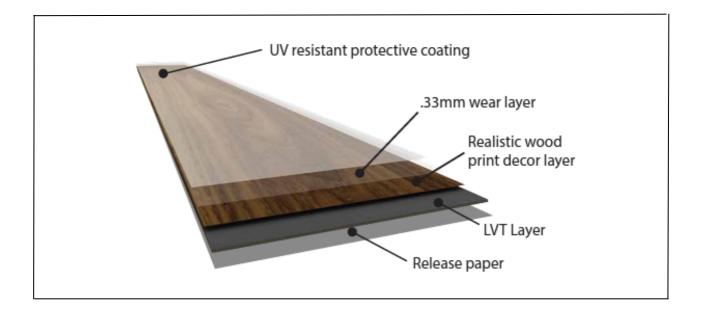

HOW TO CLEAN VINYL

- After installation, it is recommended to clean the floor to remove loose dirt or debris that may have been caused during installation.
- Regularly sweep or vacuum the floor to remove loose dirt, but avoid using vacuums with a beater bar or electric brooms with hard plastic bottoms and no padding.
- Clean up spills immediately to avoid damage to the floor.
- Use a damp microfiber mop with clean water and a diluted floor cleaner to clean the floor as needed, but avoid using harsh cleaners or chemicals, abrasive scrubbing tools, detergents, or mop and shine products.
- Test any new cleaning agent on a small patch of the floor in an inconspicuous area.
- Avoid using harsh cleaners or any cleaner with an ammonia base.
- Allow time for the floor to dry after washing, as vinyl flooring may become slippery when wet.
- Immediately wipe up wet areas from spills, foreign substances, or wet feet to prevent slipping and damage to the floor.